


Affordable, Rugged and Easy to Use BPA211 Compact Scale



Easy to Read

The BPA211 features a large, 40 mm high contrast backlight LCD display providing excellent readability under any light condition.

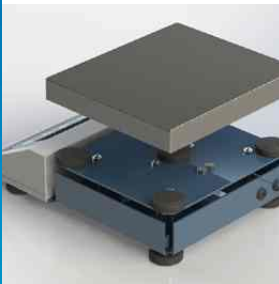

Robust and Reliable

The painted steel frame and robust plastic terminal is highly rugged and a good choice for any dry applications where reliable weighing is crucial.



Speed up Your Process

With a fast stabilization time less than a second the BPA211 will help to increase your throughput and productivity.



Built to Weigh & Last

The BPA211 compact basic weighing scale combines cost effectiveness with the well-known METTLER TOLEDO reliability. It provides accurate and fast weighing results at a good price/performance ratio.

It is easy to operate over its 4 keys (Zero, Tare, Functions, On/Off). The simple and convenient menu configuration requires minimal operator training to improve production efficiency.


Optimally placed and specifically adjusted overload stoppers grants excellent protection against load-cell damage. The easily adjustable feet allow for reliable and precise scale leveling for accurate results at any time.

Technical specifications

Display	6-digit, 7-segment LCD display with white backlight Heights: 40mm, Stabilization time <1 sec.
Resolution typical	15'000d
Power Supply	20 VAC, 50/60 Hz
Dimensions	Overall (WxHxD): 330 x 230 x 77mm Platter: 230 x 200 mm
Ingress Protection	IP54
Material	Terminal Housing: Plastic Platform Frame: Painted carbon steel Load Plate: Stainless steel
Load Cell	Potted Aluminum, Analog
Data Interface	RS232
Update Rate	10 values per second
Temperature Range	Operating: - 10°C to +40°C Storage: - 20°C to +60°C
Applications	Simple Weighing

Standard configurations

Model	BPA211-3(II)	BPA211-3(III)	BPA211-6(II)	BPA211-6(III)	BPA211-10(III)	BPA211-15(II)	PBA211-15(III)
Capacity	3 kg	3 kg	6 kg	6 kg	10 kg	15 kg	15 kg
Readabilities	0.2 g	0.5 g	0.5 g	1 g	1 g	1 g	2 g

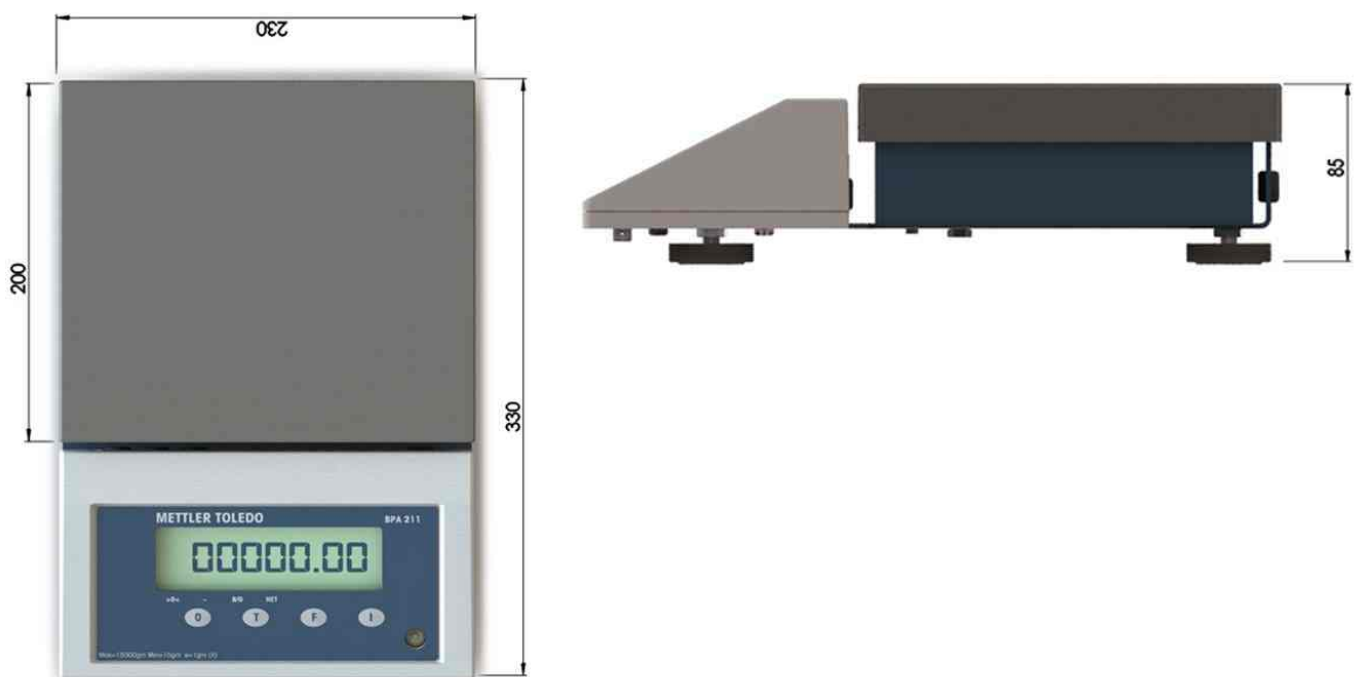

www.mt.com

For more information



Mettler-Toledo India Private Limited

Amar Hill, Saki Vihar Road, Powai, Mumbai - 400072

● Tel : 91 - 22 - 4291 0111 ● Fax : 91 - 22 - 2857 5071
● Email : sales.mtin@mt.com ● Website : www.mt.com

Service Toll Free number: 1800 22 8884

Service feedback: servicecare.mtin@mt.com