

Cost-Effective Weighing Terminal

No Compromise in Performance



High visibility display

40mm character height display with white backlight for good readability under varying light conditions; Intuitive icons on display provide enhanced operational status indication.



Fast and easy to operate

Rugged membrane keypad with seven keys includes two definable function keys; Simply and easily define the function keys in seconds and switch the application mode via a single keypress; Simple configuration via clearly defined menu navigation keys.



Flexible application

Standard application software includes basic weighing, Over/Under checkweighing, simple counting, animal weighing and accumulation.



Reliable performance

High resolution and fast stabilizing time provide greater weighing precision and a fast weight reading; 67 environmental protection (IND235) provides protection in harsh environments.



Increase operator productivity


IND235 is suitable for a variety of general purpose transaction weighing applications. Applications such as Over/Under checkweighing with ten stored targets, counting with average piece weight enhancement, animal weighing and accumulation are provided. Pre-defined application specific print templates including date and time provide transaction records. The terminal can also function as remote display for many METTLER TOLEDO industrial weighing terminals.

IND235 Terminal



Terminal	IND235
Dimensions (WxHxD)	220 x 150 x 93.3mm / 8.66 x 5.90 x 3.67 (inch)
Construction	Stainless Steel
Mounting	Mounting to wall, desk or column via included adjustable angle mounting bracket
Power	AC: 85-264VAC; 50Hz-60Hz
Operating Environment	-10°C to +40°C (14°F to 104°F), 10% to 95% relative humidity, non-condensing
Protection	IP67
Display	40mm height weight display, seven digits seven segment LCD with white backlight
Scale Interface	one analog scale
Load Cell	Up to 4 350ohm load cells, 5V excitation
Units of Measure	g, kg, lb, oz
Keypad	Seven function keys: Zero, Tare, Clear, On/Off, Print, F1 & F2 (definable)
Communication	Standard: COM1 RS232
Application	Basic weighing, X10, Date & Time, Animal weighing, Counting with APW enhancement, Over/Under checkweighing with 10 records database, Accumulation, Remote display
Approvals	Class II & III
Accessories	desk bracket; terminal protection cover

Dimensions (mm/inch)

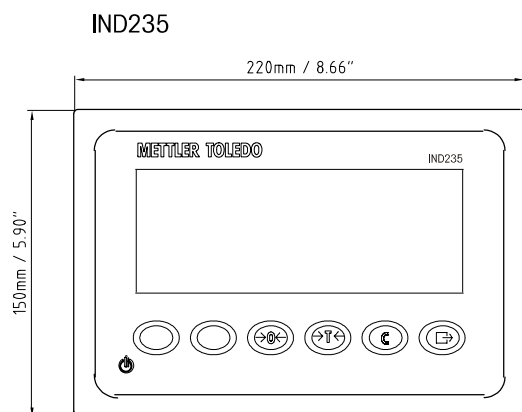

www.mt.com

For more information



Mettler-Toledo India Private Limited

Amar Hill, Saki Vihar Road, Powai, Mumbai - 400072

● Tel : 91 - 22 - 4291 0111 ● Fax : 91 - 22 - 2857 5071

● Email : sales.mtin@mt.com ● Website : www.mt.com

Service Toll Free number: 1800 22 8884

Service feedback: servicecare.mtin@mt.com